


# RatcheTite

## SlideMoor RatcheTite Optimal Tie-up

1. Make sure the line is not bound around the spindle. Always release the ratchet and pull the line out before tying up. It should be in the middle to the bottom of the spindle when tying up.
2. Simply loop the line from the RatcheTite over the cleat on the boat and tie as tightly as possible to the remaining cleat on the right side of the Slide. Be sure to crisscross the line once on each SlideMoor unit to prevent the vessel from moving fore and aft
3. Then insert the tethered tensioning handle on the hex drive, **lift the Slide up by the cleat or the SlideAssist on the right side as you and turn the RatcheTite just a few clicks to take up any slack in the line. Do not over tighten the line. Over tightening could damage the cleats on the boat, the cleats on the SlideMoor Slide or the Low Stretch dock Line. Snug is the word!**
4. The line should be close to level across from your cleat to the RatcheTite. **(not hanging down)**
5. Check your lines often and re-tension as necessary, especially in rough conditions. Lift the Slide with your right hand until the line is level across and readjust lines one click at a time with your left hand. Your RatcheTite will eliminate the need to constantly retie the lines over time.

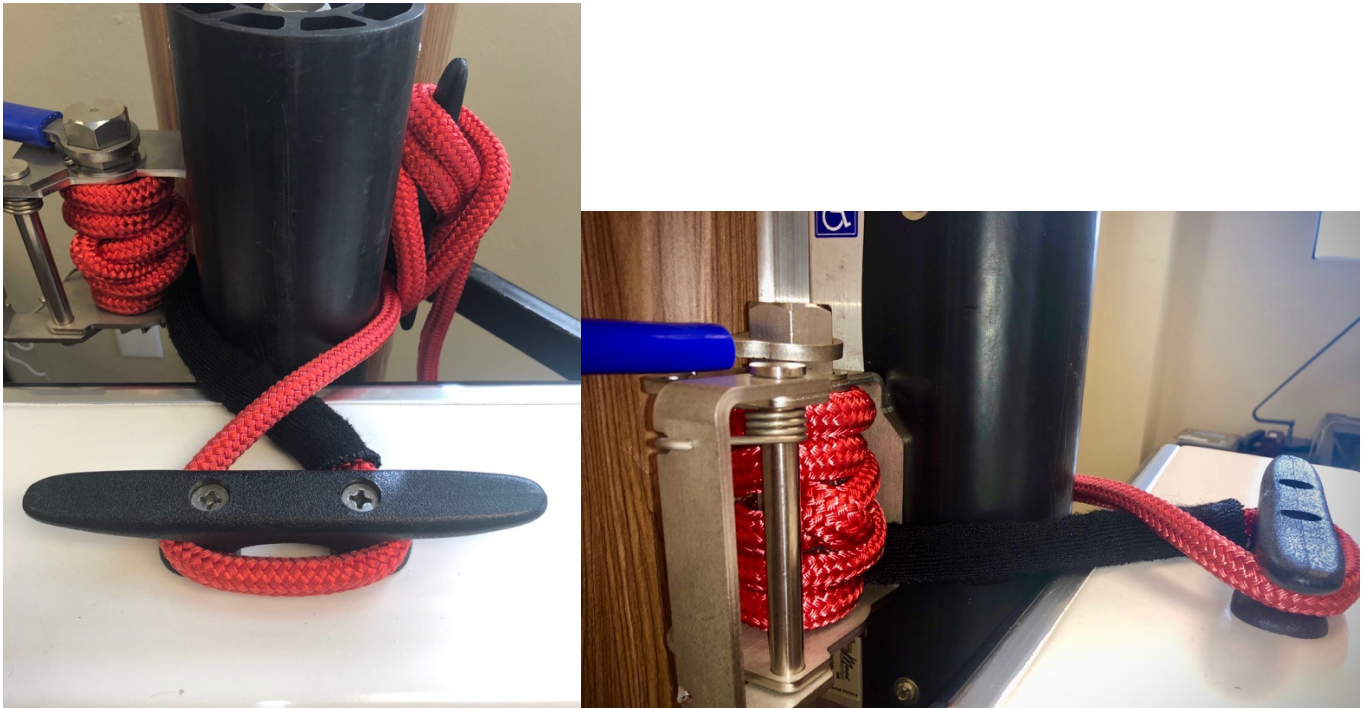

To depart from the dock, simply untie the line from the cleat on the right side of the Slide. Hang your Slide/RatcheTite unit tying the dock line to the parking cleat and you're ready to set sail. Enjoy your RatcheTite System.

**IMPORTANT: RELEASE SOME LINE FROM THE RATCHETITE UPON LEAVING THE DOCK TO AVOID BINDING THE SPINDLE WITH EXCESSIVE LINE.**